



USER MANUAL

MODEL

IP10 - IPU10
Vertical lifting

[STICKER GOES HERE]

Crosby **ip**[®]
LIFTING CLAMPS



1 complete teeth not sharp and 1 damaged
1 hele tand niet scherp en 1 beschadigd
1 ganzer Zahn unscharf und 1 beschädigt
1 dent complète non pointue et 1 endommagée
1 diente completo no afilado y 1 deteriorado
1 dente intero non affilato e 1 danneggiato
1 dente completo não afiado e 1 danificado
1 hel tand uskar og 1 beskadiget
1 hel och slö tand och 1 skadad
1 kokonainen hammas tylsä ja 1 vaurioitunut
1 hel tann uskar og 1 skadet
1 kompletny, nieostry i 1 uszkodzony ząb



2 teeth damaged for 50%
2 tanden voor de helft beschadigd
2 Zähne zur Hälfte beschädigt
2 dents endommagées à 50%
2 dientes deteriorados al 50%
2 denti danneggiati al 50%
2 dentes danificados a 50%
2 tander beskadiget 50%
2 tänder skadade till 50%
2 hammasta vaurioitunut 50%
2 tenner skadet 50%
2 zęby uszkodzone w 50%



1 teeth damaged for 100% and 1 teeth damaged for 50%
1 tand helemaal en 1 tand half beschadigd
1 Zahn komplett defekt und 1 Zahn zu 50% defekt
1 dent endommagée à 100% et 1 dent endommagée à 50%
1 diente deteriorado al 100% y 1 diente deteriorado al 50%
1 diente completamente danneggiato e 1 diente danneggiato al 50%
1 dente danificado a 100% e 1 dente danificado a 50%
1 tand beskadiget 100% og 1 tand beskadiget 50%
1 tand skadad till 100% och 1 tand skadad till 50%
1 hammas vaurioitunut 100% ja 1 hammas vaurioitunut 50%
1 tann skadet 100% og 1 tann skadet 50%
1 ząb uszkodzony w 100% i 1 ząb uszkodzony w 50%



2 rings damaged for 100%
2 ringen volkomen beschadigd
2 Ringe vollständig zerstört
2 bagues endommagées à 100%
2 anillos deteriorados al 100%
2 anelli completamente danneggiati
2 anéis danificados a 100%
2 ringe beskadiget 100%
2 ringar skadade till 100%
2 rengasta vaurioitunut 100%
2 ringer skadet 100%
2 pierścienie uszkodzone w 100%



interior ring damaged for 100%
binnenste ring geheel beschadigd
Innerer Ring vollständig zerstört
bague intérieure endommagée à 100%
Anillo interior deteriorado al 100%
anello interno completamente danneggiato
Anel interior danificado a 100%
indre ring beskadiget 100%
inre ring skadad till 100%
sisärengas vaurioitunut 100%
innvendig ring skadet 100%
Pierścień wewnętrzny uszkodzony w 100%

These areas of damage, precisely as wear, are not covered by the warranty
Deze beschadigingen vallen buiten de garantie
Derartige Beschädigungen fallen ebenso wie Verschleiß nicht unter die Garantie
Ces dommages, tout comme l'usure, ne sont pas inclus dans la garantie
Estos deterioros no están cubiertos por la garantía
Questi tipi di danno non rientrano nella garanzia
Estas áreas de danos provocadas não são abrangidas pela garantia
Disse skadesområder dækkes ikke af garantien
Dessa områden av skador som orsakats omfattas inte av garantien
Nämä kulumisen aiheuttamat vauriot eivät kuulu takuuseen
Disse typene skade, forårsaket av, dekkes ikke av garantien
Powyższe uszkodzenia nie są objęte gwarancją

LANGUAGES

English

Nederlands

Deutsch

Français

Español

Italiano

Português

Dansk

Svenska

Suomi

Norsk

Polski

USER MANUAL

GEBRUIKERSHANDLEIDING

BETRIEBSANLEITUNG

INSTRUCTIONS D'UTILISATION

MANUAL DE USUARIO

MANUALE UTENTE

MANUAL DO UTILIZADOR

BRUGSANVISNING

ANVÄNDARHANDBOK

KÄYTTÖOPAS


BRUKERHÅNDBOK

PODRĘCZNIK UŻYTKOWNIKA

USER MANUAL

For clamp types: IP10 - IPU10

Vertical lifting

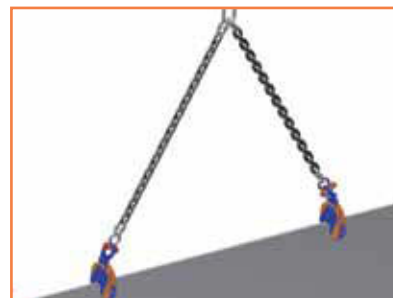

INDEX

1.	General	06
1.1	Safety precautions	06
1.2	Inspection protocols	07
1.3	How to operate the clamp	08
1.4	A reliable clamp, a secure basis for lifting	09

1. General

You have chosen a CrosbyIP lifting clamp.

If CrosbyIP clamps are maintained as described in this manual, they will remain in optimum condition. We believe that CrosbyIP clamps are the most reliable lifting clamps available. But using reliable tools does not automatically mean that practices are reliable. The people who work with clamps play an equally important role in reliable lifting. Ensure that everyone who works with CrosbyIP lifting clamps has been instructed in the proper application of the clamps.

Inter Product BV provides a 10 year warranty for its clamps. In order to benefit from this warranty programme and for more details on maintenance procedures, please consult www.crosbyip.com/warranty for more information.

Please read and understand these instructions before using the lifting clamp.



It is not permitted to stay in the danger zone of the load.

Ensure that the load remains on the ground when turning.

No changes may be made to CrosbyIP clamps. Never straighten, attempt to bend or heat treat parts.

Clamps suited for stainless steel, must be used only for handling stainless steel, to avoid contact corrosion.

1.1 Safety precautions

- Proper instruction for the personnel is of vital importance. This will contribute to maximum reliability in the working environment.
- The IP10 – IPU10 clamps may be applied per piece, per set or several at the same time for the lifting of steel plates. Because it is important that when more than 2 clamps are used each clamp receives an equal share of the load, it is recommended that an equalizing beam is used.
- Hardness: With the standard clamps it is possible to lift steel with a surface hardness of 363 HV10. With the clamps IP.H and IPU..H steel up to a surface hardness of 472 HV10. For harder steel types contact your CrosbyIP Customer Service Centre.
- Contact your CrosbyIP Customer Service Centre before using this clamp for plates and constructions that have a radius.
- Temperature: The standard lifting clamps may be used with temperatures that lie between 100 °C (212 °F) and -40 °C (-40 °F). For other temperatures contact your CrosbyIP Customer Service Centre.
- There are restrictions for operation in special atmospheres (e.g. high humidity, explosive, saline, acid, alkaline).
- Loads: For proper application of the clamp consult the load diagrams 1-2.
- Ensure that all attachments between lifting eye and crane are properly fitted, secured and coupled.
- For each lift only **one** plate may be transported or lifted.
- Pivot(s) and camsegment may **not** be placed on sloping or conical surfaces. Contact your Customer Service Centre for assistance in selecting a clamp suitable for bevelled plates.

- When the crane hook or attachment is too large and/or too heavy, use properly sized CrosbyIP 5000 stinger assembly or a chain sling with D-shackle of 75 cm (30 inch), with a strength that corresponds to the W.L.L. of the clamp. This will, when setting the load down, prevent the hook from descending too far allowing the clamp to open under the weight of the hook, or, in the case of an unprotected crane hook, its descending from the lifting eye. When suspending the clamp directly on the secured crane hook attention must be given to ensuring that the crane hook can move freely in the lifting eye. Ensure that the crane hook and other material is protected.
- Remark: when handling the load, one should ensure that the load and or clamp does not encounter obstacles which could release the load on the clamps prematurely.
- A clamp is a device that must be clean when used. Dirt has an adverse affect on the operation and also on the reliability of the clamp. When the clamp is dirty and greasy it can be cleaned with diesel oil or petroleum. Then blow dry with air or dry with a cloth and apply a little lubricant. It is important to ensure that the gripping surfaces are clean at all times. Regular cleaning will enhance the life and reliability of the clamps.

1.2 Inspection protocols

Prior to every application of the clamp it is important the clamp operator inspects the clamp for proper functioning.

Attention must be paid to the following (see illustration(s) 3 for part reference):

- Ensure that the plate surface with which the clamp is to come into contact is free of scale, grease, oil, paint, water, ice, moisture, dirt and coatings that might impede the contact of the gripping surface with the plate.
- Inspect pivot(s) (C) and camsegment (B) for wear and defects. The pivot(s) and teeth must be sharp and free of dirt.
- Check the body (N) and the jaw for damage, cracks or deformation (this may indicate overloading). The clamp must open and close properly (when the operation of the clamp is stiff or heavy, it should be removed from operation for inspection).
- Check the lifting eye (D) and camsegment shaft (G) for readily detectable wear and/or damage.
- Check the spring (M). Press when the latch lever (A) is closed on the lifting eye (D). There should be clearly apparent spring tension. The clamp should, when the lifting eye is released, return to the closed position without problems.
- Check whether the W.L.L. and the jaw opening stamped on the body corresponds with the load to be lifted.
- Always apply the minimum load, otherwise the load risks slipping out unintentionally.

Minimum load permitted:

- 5% of the W.L.L. applying to plate surface hardness 279 HV10.
- 10% of the W.L.L. applying to plate surface hardness 363 HV10.
- For clamps IP..H and IPU...H
10% of the W.L.L. applying to plate surface hardness 472 HV10.

The pivot(s) and the camsegment are the most critical parts in the clamp and require extra attention during inspection. Ensure in any event for good light during inspection.

Observe the following rules during every inspection:

- Pivot(s): Reject when the sharpness of **one** ring is damaged or worn for 50% or more.
- Camsegment: Reject when the sharpness of **one** tooth is damaged or worn for 50% or more.

Some illustrations have been included on the inside of the front cover of damaged and worn (rejected) pivots and camsegments with explanations. In most cases however the areas of damage are much less extensive. In doubtful cases an authorised repairer should assess the clamp.

1.3 How to operate the clamp

IP10 - IPU10 lifting clamps are suitable for the lifting, turning and vertical transport of steel plates and structures.

See illustrations 4-8 for part reference.

1. Open the clamp by pulling the latch lever (A) towards the jaw (4).
2. Place the clamp securely on the plate so that the jaw of the clamp rests on the plate (E) (5).
3. Pull the latch lever (A) towards the lifting eye (D). The clamp will now close and will remain on the plate in pretensioned position, allowing lifting to commence (6).
4. As soon as the load is at its destination let the crane hook descend until the clamp is fully free of load, meaning that the lifting chain is no longer taut and the lifting eye (D) of the clamp can move freely. To release the load pull the latch lever (A) towards the jaw, allowing the clamp to be and remain opened (7).
5. The clamp may now be used again immediately or put away in opened position. This position will protect the teeth from damage (8).

1.4 A reliable clamp, a secure basis for lifting

10 Year warranty preventive maintenance procedure:

During every maintenance service the most critical parts, being pivot(s), camsegment and spring are replaced and, when necessary, any rejected parts will be replaced.

For clamps with a Working Load Limit (W.L.L.) of 9 ton or more, parts will be replaced only when they no longer meet our standards.

10 Year warranty repair procedure:

During every repair service the most critical parts, being pivot(s), camsegment, spring, shafts and latch lever will be replaced and, when necessary, any rejected parts will be replaced.

For clamps with a Working Load Limit (W.L.L.) of 9 ton or more, parts will be replaced only when they no longer meet our standards.

Please consult www.crosbyip.com/warranty for more information on maintenance procedures.

Maintenance without 10 year warranty: Annually clamps are subjected to inspection* and parts will be replaced only when they no longer meet our standards.

*CrosbyIP authorised repairer

Explanation test certificate

Verklaring testcertificaat

Erläuterung des Prüfscheins

Explication du certificat d'essai

Explicación del certificado de prueba

Spiegazione del certificato di collaudo

Explicação do certificado de teste

Förklaring af testcertifikat

Förklaring till provningsintyg

Testsertifikaatin selvitys

Förklaring av testsertifikat

Świadectwo badania – objaśnienie

EN EU Declaration of EU Declaration of Conformity: We hereby declare that the equipment described below conforms to the relevant fundamental safety and health requirements of the appropriate EU Directives, both in its basic design and construction as well as in the version marketed by us. This declaration will cease to be valid if any modifications are made to the machine without our express approval.

Relevant EU Directives: **EU Machinery Directive (2006/42/CE)**. Applied standards: **ASME B30.20**

NL EU-conformiteitsverklaring: Hiermee verklaren wij dat de hierna vermelde machine op grond van haar basisvormgeving en constructie en in de door ons in omloop gebrachte uitvoering beantwoordt aan de desbetreffende veiligheids- en gezondheidsvoorschriften van de EU-richtlijnen. Na een wijziging aan de machine die niet in overleg met ons wordt uitgevoerd, verliest deze verklaring haar geldigheid.

Desbetreffende EU-richtlijn: **EU-machinerichtlijn (2006/42/CE)**. Toegepaste normen: **ASME B30.20**

DE EG-Konformitätserklärung: Hiermit erklären wir, daß die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der jeweiligen EG-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese Erklärung ihre Gültigkeit.

Einschlägige EG-Richtlinien: **EG-Maschinenrichtlinie (2006/42/EG)**. Angewandte Normen : **ASME B30.20**

FR Déclaration de conformité UE : Par la présente, nous déclarons que l'équipement décrit ci-après est conforme, de par sa conception et sa construction et de par le modèle que nous avons mis sur le marché, aux exigences fondamentales de sécurité et de santé des directives européennes pertinentes. En cas de modification de la machine effectuée sans notre accord, cette déclaration sera caduque.

Directives UE pertinentes : Directive Machines (2006/42/CE). Normes appliquées : **ASME B30.20**

ES Declaración de la UE de la Declaración de conformidad de la UE: Por la presente declaramos que el equipo descrito a continuación cumple los requisitos de salud y seguridad fundamentales y relevantes de las Directivas de la UE apropiadas, tanto en su diseño básico y construcción como en la versión comercializada por nosotros. Esta declaración dejará de ser válida si se efectúa alguna modificación a la máquina sin nuestra aprobación expresa.

Directivas de la UE relevantes: **Directiva de maquinaria de la UE (2006/42/CE)**. Normativa aplicada: **ASME B30.20**

IT Dichiarazione CEE o Dichiarazione di Conformità CEE: Con la presente dichiariamo che l'apparecchiatura descritta qui di seguito è conforme ai requisiti di sicurezza e salute fondamentali rilevanti per le Direttive CEE appropriate, sia nel suo design e costruzione di base sia nella versione da noi commercializzata. Questa dichiarazione non sarà più valida se vengono effettuate delle modifiche alla macchina senza la nostra approvazione.

Direttive CEE rilevanti: **Direttiva CEE sulle macchine (2006/42/CE)**. Standard applicati: **ASME B30.20**

PT Declaração de Conformidade da UE: Declaramos por este meio que o equipamento descrito abaixo está em conformidade com os requisitos de saúde e segurança relevantes da Diretivas da UE adequadas, no que respeita ao design básico e à construção, assim como a versão comercializada pela nossa empresa. Esta declaração deixará de ser válida se efetuar alterações na máquina sem a nossa aprovação expressa.

Diretivas da UE relevantes: **Diretiva da Maquinaria da UI (2006/42/CE)**. Normas aplicada: **ASME B30.20**

DA EU-overensstemmelseserklæring: Vi erklærer hermed, at udstyret, som er beskrevet nedenfor, er i overensstemmelse med de relevante grundlæggende sikkerheds- og sundhedskrav fra de relevante EU-direktiver, både i dets grundlæggende udformning og konstruktion samt i den version, der markedsføres af os. Denne erklæring vil ophøre med at være gyldig, hvis der foretages ændringer på maskinen uden vores udtrykkelige godkendelse.

Relevante EU-direktiver: **EU-maskindirektiv (2006/42/CE)** . Anvendte standarder: **ASME B30.20**

SE Försäkran om EU-överensstämmelse: Vi intygar härmed att utrustningen som beskrivs nedan uppfyller relevanta grundläggande säkerhets- och hälsokrav i enlighet med tillämpliga EU-direktiv, både under dess grundläggande design och tillverkning såväl som i den version som marknadsförs av oss. Detta intyg kommer att upphöra att gälla om några ändringar görs på maskinen utan vårt uttryckliga godkännande.

Relevanta EU-direktiv: **Europeiska maskindirektivet (2006/42/CE)**. Tillämpade standarder: **ASME B30.20**

FI EU:n vaatimustenmukaisuusvakuutus: Vakuutamme, että seuraavassa kuvattu laite täyttää asianomaisten EU-direktiivien asiaan kuuluvat perusturvallisuus- ja terveysvaatimukset sekä perussuunnittelultaan että rakenteeltaan ja lisäksi meidän myymämme version osalta. Tämä vakuutus mitätöityy, jos laitteeseen tehdään mitään tahansa muutoksia ilman meidän erityistä hyväksyntäämme.

Asianomaiset EU-direktiivit: **EU:n konedirektiivi (2006/42/CE)**. Sovelletut standardit: **ASME B30.20**

NO EU-erklæring EU-samsvarserklæring: Vi erklærer herved at utstyret som beskrives nedenfor er i samsvar med fundamentale krav til sikkerhet og helse i de relevante EU-direktivene, både i dets grunnleggende design og konstruksjon og i versjonen som vi markedsfører. Denne erklæringen gjelder ikke lenger dersom det gjøres endringer på utstyret uten uttrykkelig godkjenning.

Relevante EU-direktiver: **Maskindirektivet (2006/42/EU)**. Anvendte standarder: **ASME B30.20**

PL Deklaracja zgodności WE: Niniejszym oświadczamy, że niżej opisane urządzenie (zarówno jego podstawowa konstrukcja, jak i wersja wprowadzona przez nas na rynek) spełnia obowiązujące wymagania w zakresie bezpieczeństwa odpowiednich dyrektyw UE. Niniejsza deklaracja traci ważność w przypadku wprowadzania jakichkolwiek zmian w urządzeniu bez naszej wyraźnej zgody.

Stosowne dyrektywy UE: Dyrektywa Parlamentu Europejskiego i Rady ws. maszyn **(2006/42/WE)**. Obowiązujące normy: **ASME B30.20**

.....
Manufacturer/Fabrikant/Hersteller/Fabricant/Fabricante/Produttore/Fabricante

CrosbyIP – Inter Product BV
Celsiusstraat 51
6716 BZ Ede
The Netherlands

Ede 01-03-2011



(W. Caubergs)

Manufacturer:

CrosbyIP – Inter Product BV
Celsiusstraat 51
6716 BZ Ede
The Netherlands

Customer Service Centres**BELGIUM**

Industriepark Zone B n°26
2220 Heist-op-den-Berg
P: (+32) (0)15 75 71 25
F: (+32) (0)15 75 37 64
sales@crosbyeurope.com

FRANCE

21, rue du Petit Albi
Parc d’Affaires Silic
95800 Cergy - St. Christophe
P: (+33) (0)1 34 201 180
F: (+33) (0)1 34 201 188
sales@crosbyeurope.fr

UNITED KINGDOM


Station Street
Cradley Heath
West Midlands B64 6AJP
P: (+44) (0)1226 290 516
F: (+44) (0)1226 240 118
sales@crosbyeurope.co.uk

U.S.A


P.O. Box 3128
Tulsa, OK 74101
P: (+1) (918) 834 46 11
F: (+1) (918) 832 09 40
crosbygroup@thecrosbygroup.com

CANADA


145 Heart Lake Road
Brampton, Ontario L6W 3K3
P: (+1) 905 451 9261
F: (+1) 877 260 5106
sales@crosby.ca

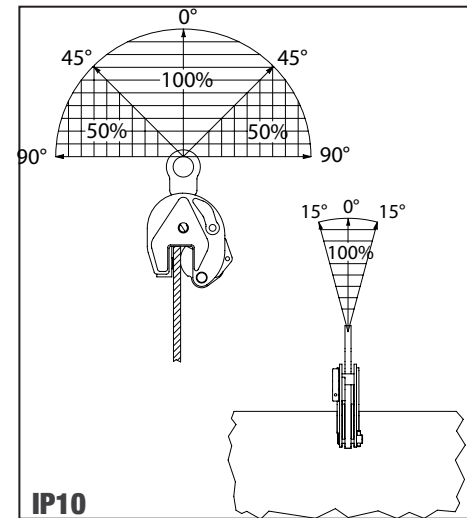


1

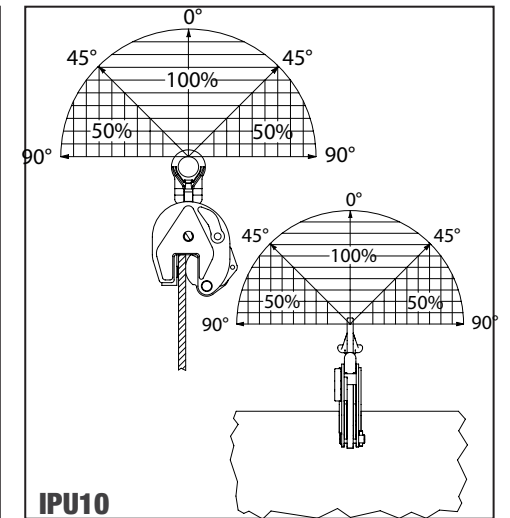


2

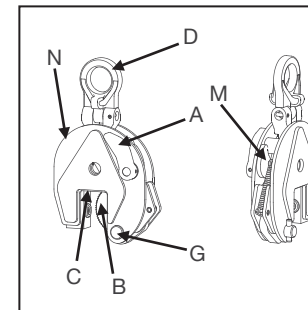


3

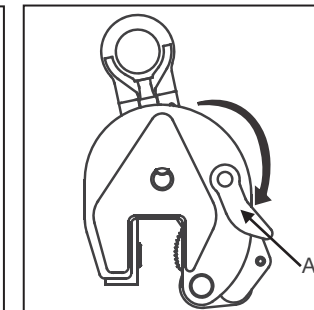


4

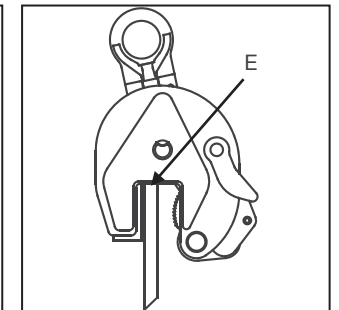


5

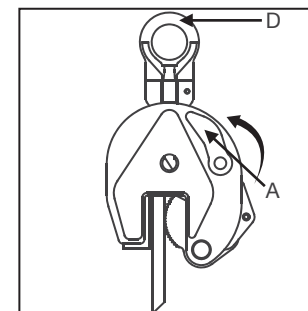

6

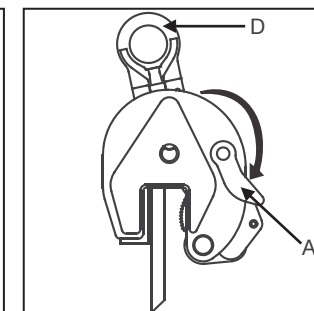

7

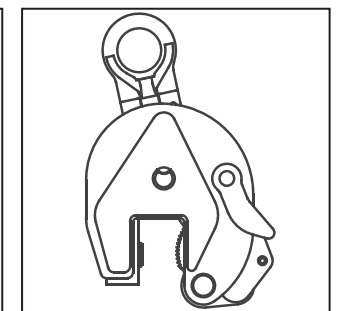

8



WARNING

- Loads may disengage from clamp if proper procedures are not followed.
- A falling load may cause serious injury or death.
- The clamp shall not be loaded in excess of its rated load or handle any load for which it is not designed. Read instructions in user manual to determine minimum load permitted and proper load thickness.
- Never operate a damaged or malfunctioning clamp, or a clamp with missing parts.
- Clamp not to be used for personnel hoisting.
- Prohibition of handling above persons.
- Do not leave suspended loads unattended.
- Operator and other personnel shall stay clear of the load.
- Do not lift loads higher than necessary.
- Do not make alterations or modifications to clamp.
- Do not remove or obscure warning labels.
- See ANSI/ASME B30.20 BELOW-THE-HOOK LIFTING DEVICES for additional information.
- Read, understand, and follow these instructions and the product safety information in user manual before using clamp.

