


Montageanleitung Ersatzteilgarnitur

Installation instructions spare parts

D

- 1 Entfernen Sie den Spannstift mit dem Durchschlag.
- 2 Bauen Sie die Teile A, B, und C zusammen. Geben Sie diese Einheit nun in den Haken und sichern Sie sie durch Einstecken des Bolzens E.
- 3 Platzieren Sie den Spannstift über dem Bolzen E.
- 4 Schlagen Sie den Spannstift ganz in den Haken ein. Die Hülse C und der Bolzen E werden dabei entfernt. Anschließend schlagen Sie den inneren Spannstift in den äußeren Spannstift ein.

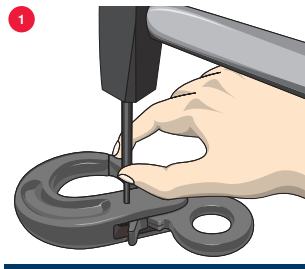

E

- 1 Remove the retaining spring using the striking rod.
- 2 Set up the Trigger Set (A, B, C), attach it to the hook by putting the temporary pin E through the hook and the temporary sleeve.
- 3 Place the spring on top of the temporary pin E positioned in the unit.
- 4 Remove the temporary sleeve C and pin E by striking the retaining spring into the hook. Following strike the inner retaining pin into the outer retaining pin.



Ersatzteile und Werkzeuge

Spare parts and tools

pewag

**STRONG
IS NOT
ENOUGH**

www.pewag.com

D

- A** Hebel
- B** Feder
- C** Hülse
- D** Äusserer Spannstift
- E** Bolzen
- F** Innerer Spannstift

A



B



C



D



E

- A** Trigger
- B** Spring
- C** Temporary sleeve
- D** Outer retaining pin
- E** Temporary pin
- F** Inner retaining pin

E



F

